



IP Address

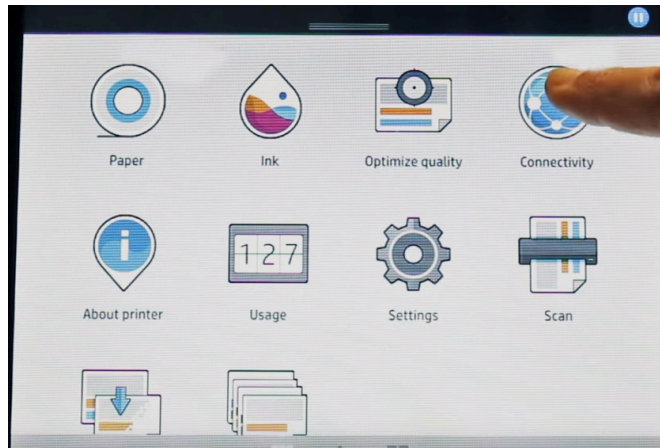

Select the 'Connectivity' icon on the main screen

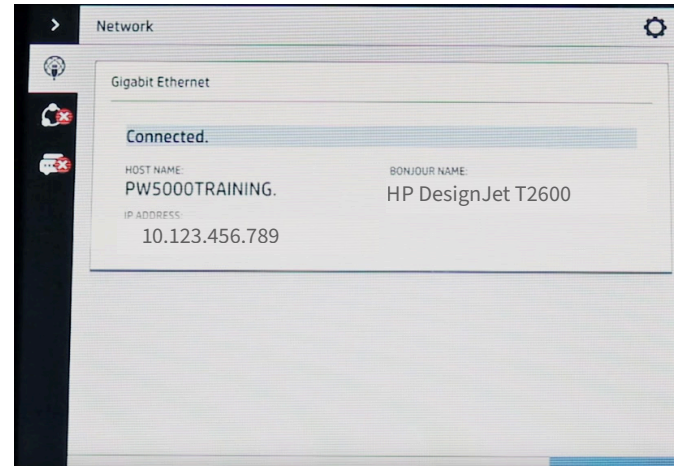

The IP Address should appear on the 'Network' screen.