




LUMBER


HP LaserJet e42540

IP Address | Configuration Report Page | Basic Driver


IP Address

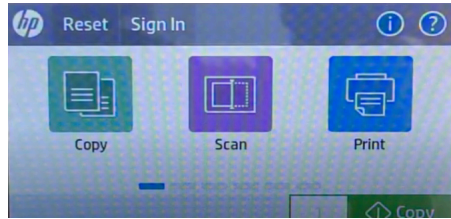

From the main screen, tap the Information icon

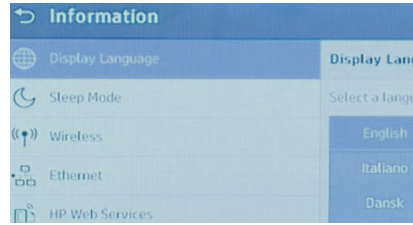


On the next screen, tap the Ethernet icon

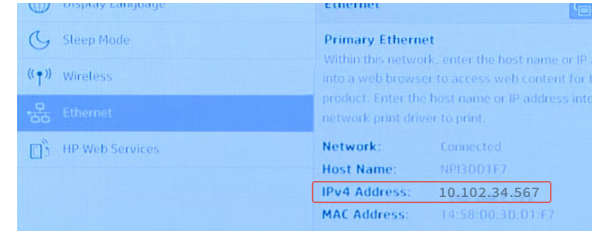


Locate the 'IPv4 Address' to view the IP Address.


Print Configuration Report

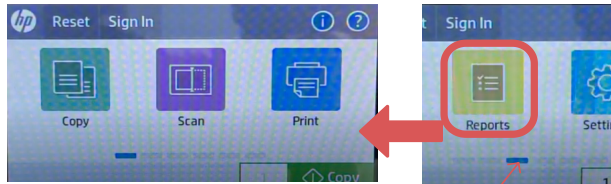


From the main screen, swipe to the left until you see the 'Reports' option (in the 3rd section).

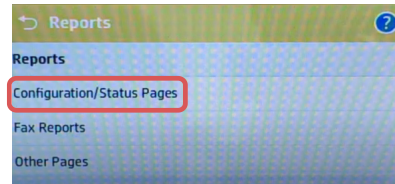

On 'Reports,' select 'Configuration/Status Pages.'

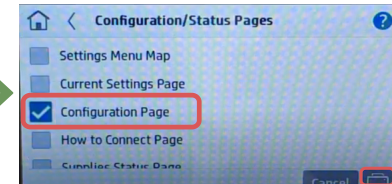

Select 'Configuration Page' and tap the Print icon then you will see the 'Preparing Job' prompt at the top

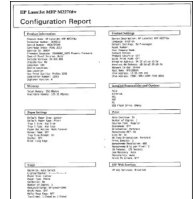

Locate the IPv4 Address on the page
i.e: 10.102.34.567

Driver (PCL 5) <https://drive.google.com/drive/folders/1BwUkfVD3HLiTWTZpvuzUKrXQla0bKFHD>